

179 SERIES



FEATURES & BENEFITS

"ACCUWAY" Spread Pattern Equalizer
ENSURES spreading dead center of the
spreader. (Indicated with "22" in model number)

20 SERIES



Gears are unconditionally guaranteed
ENSURES trouble free operation.

90 SERIES



Dial-A-Matic spread rate control
ENSURES spreading at exact spread
rates.

70 SERIES



Optional **BORDER PATROL** spread pattern
cut-off prevents spreading on drive-ways,
flower beds, etc.

Extension hoppers available for all round
hopper spreaders. Adds 20 lbs. to
capacity.

Shipped Set-Up. Saves time and labor
ENSURES proper assembly. (except #64)

Stainless steel frames ensure longer
spreader life, easier maintenance and
present a quality image.

High grade plastic non-corroding wheels
with nylon bearings, no lubrication
required, **ENSURES** trouble free
maintenance.

MODEL 299
Mulch Spreader



P.O. Box 7 • 140 Mill Street • Urbana, IN 46990 USA
1-800-972-6130 • Fax 260-774-3416

SPYKER

THE SPREADER PEOPLE

spread with confidence

For Model:
288 SUPER

Spreading Chart

Operation Guide

Service Manual

Parts List



It's the spread that counts

P.O. Box 7
140 Mill Street
Urbana, IN
46990 USA



1-800-972-6130
Fax: 260-774-3416

**For Quick and Easy Assembly - First Read Entire Procedure
Then Follow Carefully The Step by Step Instructions**

Tools You will Need:

Screwdriver
7/16 Wrench
Pliers



Parts You will Use:

Parts for Model: 288 Super

- (2) Drive/Idle Wheel
- (2) Handle - SS.
- (8) Nut 1/4 - 20
- (4) 1/4 - 20x1-1/2 Bolt
- (4) 1/4 - 20x2-3/4 Bolt


1.

Unpack spreader,
and place on a flat
surface.



2.

Insert handle (40)
into frame.
Then, repeat for
2nd handle.

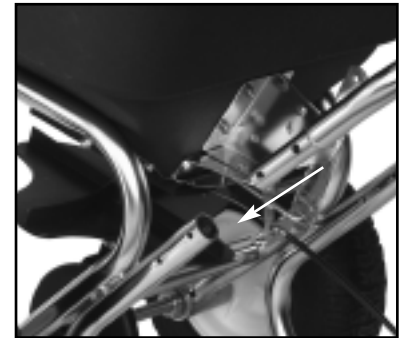

3.

Secure handles to
frame with 2 bolts
(47) and nuts (5).



4.

Insert on/off control
bracket assembly
between the two
handles and secure
with two bolts [41]
and nuts [5].

